AM/FM Stereo Headset Radio

OWNER'S MANUAL — Please read before using this equipment.

INSTALLING THE BATTERY

1. Press down on the battery cover, near the cushion of the left headphone, and slide it off in the direction of the arrow.
2. Place one AAA alkaline battery (not supplied) in the compartment as indicated by the polarity symbols (+ and –) marked inside. For the best performance and longest life, we recommend RadioShack alkaline batteries.
3. Replace the cover.

Caution:

- Be careful not to bend the metal contact in the battery compartment.
- Always use a fresh battery of the required size and type.

FCC STATEMENT

Your headset radio might cause TV or radio interference even when it is operating properly. To determine whether your headset radio is causing the interference, turn it off. If the interference goes away, your radio is causing it. Try to eliminate the interference by:

- Moving your radio away from the receiver
- Contacting your local RadioShack store for help

USING THE RADIO

Slide the sides of the headband in or out to fit the cushions over your ears.

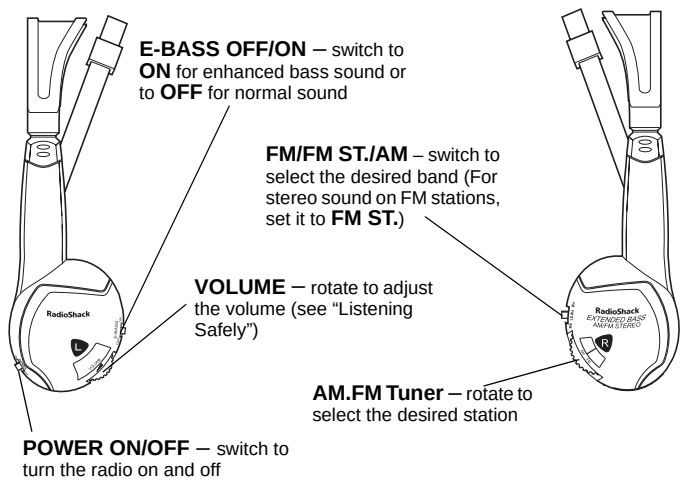

Listening Safely

To protect your hearing when using your headset radio, set the volume to the lowest setting before you begin listening, then adjust it to a comfortable level. Wearing headphones while driving a car or riding a bicycle can create a traffic hazard and can be illegal in some areas.

CARE

- Handle it gently.
- Keep it away from dust, moisture, and temperature extremes.
- Clean it with a damp cloth. Do not use harsh chemicals.

Do not take it apart. If something is wrong with the radio, take it to your local RadioShack store for assistance.

SPECIFICATIONS

Frequency Range	AM: 530 – 1710 kHz FM: 88 – 108 MHz
Power Requirement	DC 1.5 V (one AAA battery)
Dimensions (HWD)	$7^{1}/_{16} \times 6^{1}/_{2} \times 2^{3}/_{16}$ inches (180 × 165 × 55 mm)
Weight (without battery)	0.28 lb (125 g)

Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.
Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitations or exclusions may not apply to you.
In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.
This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.
This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.
RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

We Service What We Sell *12/99*

RadioShack Corporation
Fort Worth, Texas 76102

12-929
06A00
Printed in Hong Kong

© 2000 RadioShack Corporation.
All Rights Reserved.
RadioShack and RadioShack.com are trademarks used by RadioShack Corporation.

RadioShack®
www.radioshack.com℠